

TWEENY BITE ALARM SET



OPERATING INSTRUCTIONS

1. FEATURES FOR TRANSMITTER

- Folding and telescopic snag ear bar
- Bright LED light color Red, Yellow, Blue, Green
- Adjustable Sensitivity, Volume, Tone button
- 256 Variable code enough to prevent interference from another angler
- LED alarming signals with high output speaker
- High visibility LED latching about 30 seconds
- Extra jack for illuminated swinger
- Separate battery compartment
- Brass fix bolt
- Require 1pcs 12v 23a battery

2. FEATURES FOR RECEIVER

- 100m plus transmission range
- 6 different color LEDs to match 6 different alarms
- ON/OFF, Adjustable Volume, Tone, Vibration button
- Vibration, LED Alarming signals with high output speaker
- Separate battery compartment
- Require 2 pcs AAA batteries

3. ALIMENTATION

The bite alarm operates on a 12v 23a battery and the receive on 2x AAA 1,5v batteries.

Slide out the battery cover at rear of the alarm and insert on piece of 12v 23a battery, ensuring the correct polarity and connection. As the battery is connected you will hear beeps and LEDs will flash, then slide back the battery cover into place.


Always have the alarm switched off when replacing or change battery. Alkaline battery is greatly recommended for maximum battery life.

Change the battery immediatly if one of the parts fell into water.

This unit is not waterproof but can withstand droplets of water (ex. Light rain).

Take out the battery before storing for a longer period of time, this will ensure a longer life and durability for the battery.

Make sure the unit is switched off before changing or removing the battery.

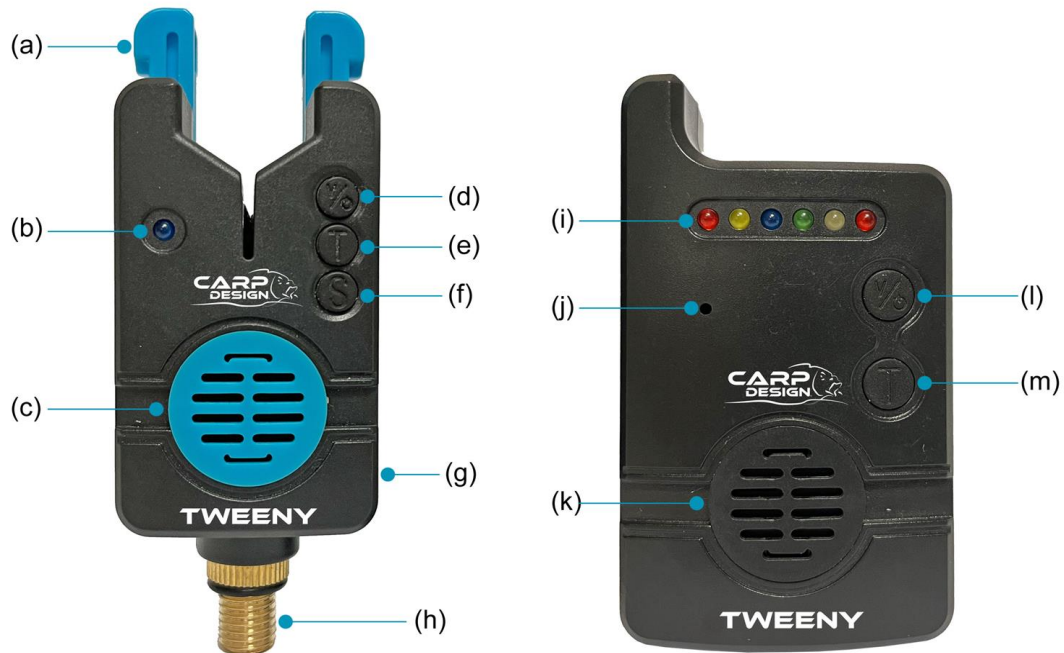

TRANSMITTER

- (a) folding snag ear bar which could be adjustable
- (b) latching LED with 30 seconds signal memory
- (c) output speaker
- (d) ON/OFF, volume button (press for 5 seconds to turn on/off the bite alarm, short press to control volume)
- (e) tone control button
- (f) sensitivity control button
- (g) extra jack for illuminated swinger, fit size 2.5mm plug
- (h) standard brass fix bolt

RECEIVER

- (i) 6 different colors LED, Red, Yellow, Blue, Green, Pink and White to match 6 different bite alarm/transmitter
- (j) ID Code button
- (k) outout speaker
- (l) ON/OFF, volume button (press for 5 seconds to turn on/off the bite alarm, short press to control volume)

(m) tone control button

5. MATCH WIRELESS TRANSMITTER AND RECEIVER

When the transmitter and receiver does not match each other, or add more transmitter to match receiver, please find the ID Control button on the receiver (j) and follow the step:

- Turn on the transmitter and receiver
- Keep pressing the ID Code button (j) over 5 seconds, till the receiver beep
- To roll and actuate the 1st Red LED bite alarm, then the Red indicating LED on the receiver start flashing, and the next near Yellow indicating LED keep lighting, now te Red LED transmitter/bite alarm has been matched with Receiver
- Then to repeat step 3 to match for 2nd Yellow, 3rd Blue and 4th Green LED transmitter/bite alarms
- The match function will be turned off automatically after the last 4th Green transmitter has been matched