

# D-FUSION BITE ALARM SET



## OPERATING INSTRUCTIONS

### 1. FEATURES FOR TRANSMITTER

- 16 LED band for drop/back, speed, setting direction
- Adjustable Sensitivity, Volume, Tone button
- Drop back with different sound
- 256 variable code enough to prevent interference from other anglers
- LED Alarming signals with high output speaker
- High visibility LED latching about 20 seconds
- Extra jack for illuminated swinger
- Separate battery compartment
- Adjustable LED bright

### 2. FEATURES FOR RECEIVER

- 100m plus transmission range
- 6 different color LEDs to match 6 different alarms
- ON/OFF, Adjustable Volume, Vibration button
- Vibration, LED Alarming signals with high output speaker
- Separate battery compartment
- Memory LED
- Night light

### 3. ALIMENTATION

The bite alarm operates on a 9v battery and the receiver on 3x AAA 1,5v batteries.

Slide out the battery cover at rear of the alarm and insert one piece of 9v battery, ensuring the correct polarity and connection. As the battery is connected you will hear beeps and LEDs will flash, then slide back the battery cover into place.

Always have the alarm switched off when replacing or change battery. Alkaline battery is greatly recommended for maximum battery life.

Change the battery immediatly if one of the parts fell into water.

This unit is not waterproof but can withstand droplets of water (ex. Light rain).

Take out the battery before storing for a longer period of time, this will ensure a longer life and durability for the battery.

Make sure the unit is switched off before changing or removing the battery.



#### TRANSMITTER

- (a) 16 LED band with color Red, Yellow, Blue, Green
- (b) sensitivity control
- (c) M button to control LED bright
- (d) output speaker
- (e) ON/OFF button
- (f) volume control
- (g) tone control
- (h) extra jack for swinger

#### RECEIVER

- (i) 6 colors LED, Red, Yellow, Blue, Green, Pink and White to match 6 different bite alarm/transmitter
- (j) tone up control
- (k) tone down control
- (l) outout speaker
- (m) ON/OFF button

(n) volume up

(o) volume down

(k) + (o) ID Code

The default transmitter and receiver has been connected, please don't press "ID Code" button if not necessary, it may cause the transmitter and receiver disconnected.

#### 5. MATCH WIRELESS TRANSMITTER AND RECEIVER

When the transmitter and receiver does not match each other, or add more transmitter to match receiver, please find the ID Control button on the receiver (k) + (o) and follow the step:

- Turn on the transmitter and receiver
- Please press both button (k) Tone down and (o) Volume down for 5 seconds till the receiver beeps, start to match bite alarms
- To roll and actuate the 1<sup>st</sup> Red LED bite alarm, then the Red indicating LED on the receiver start flashing, and the next near Yellow indicating LED keep lighting, now te Red LED transmetter/bite alarm has been matched with Receiver
- Then to repeat step 3 to match for 2<sup>nd</sup> Yellow, 3<sup>rd</sup> Blue and 4<sup>th</sup> Green LED transmitter/bite alarms
- The match function will be turned off automatically after the last 4<sup>th</sup> Green transmitter has been matched